

STARING SM90CHK



>> Before you use the Mixer, please read the Instruction manual

Dear STARING Customer,

STARING SM90 is a pan mixer of the most advanced design in the market and easily meeting all site requirements of today. The maximum performance and the simple, easy operation of the STARING SM 90 are results of our recent development work within the mixer technology field.

In order to achieve safe handling of the STARING SM90, we ask you to read the following instruction manual carefully.

>> **Contents**

1.	Technical Data.	4
2.	Safety and Prevention of Accidents	5
3.	Special Safety Equipment.	7
4.	Transport	8
5.	Starting Procedure	9
6.	Using the Mixer	10
7.	Adjustment of Mixer Blades	11
8.	Cleaning and Maintenance of the Mixer.. . . .	12
9.	Spare Parts	13
10.	Spare Part List	13
11.	Guarentee	14
12.	EC Declaration of Conformity.. . . .	15

>> 1. Technical Data

Mixer Type	SM 90
Mixer Weight	89 kg
Gross Volume	90 l
Net Volume	approx ca. 50 L
Pan Diameter	610 mm
RPM	25 (l/min)
No. of Mixer Arms	3
Discharge Height	760 mm
Electric Motor Output	1,5 kW
Protection	IP 54
Voltage	230V
Power Consumption	9,2A
Frequency	50 Hz
Noise Level at the Working Place (Mixing)	78 dB(A)
Noise Level at the Working Place (Idling)	58 dB(A)
Mixer Noise Level (Mixing)	<68 dB(A)
Mixer Noise Level (Idling)	<66 dB(A)

Identification:

The Manufacturer's type sign states the mixer type. No. in the first field. The second field consists of seven figures of which the first three figures state the machine No., the next two figures the building year and the last two figures the month of the building year. The third field states the net weight in kg of the mixer.



>> 2. Safety and Prevention of Accidents

Instruction Manual

All persons dealing with the use, installation, operation, maintenance, start and repair must have read and understood the Instruction Manual.

Persons Responsible

The operator of the mixer is responsible for the fact that only persons who are qualified and have been instructed in the operation of the machine operate, maintain or repair the mixer.

Purposeful Use

Mixers are machines for production of concrete, mortar and for processing of refractory materials. The mixer can handle solid materials without adding water or aggregates.

The mixer may only be used in accordance with the intended purpose and may not be used for mixing of inflammable or explosive materials. The mixer is not suitable for mixing of foodstuffs.

Power Supply

The mixer may not be connected to wall sockets with earth wire.

The connection requires being wired into the supply provided. Cabling with a cross section of 1,5 mm² and approved socket outlet and plug must be used.

If the cables are defective the mixer may not be operated. Defective cables can be a danger to life. Use only cables and plugs which are fault free.

Danger to Persons an Equipment

If the mixer is operated incorrectly and not in accordance with the intended purpose, damage to persons or equipment may result. **Therefore any incorrect use of the mixer is not allowed!**

>> 2. Safety and Prevention of Accidents

Safety Equipment

The mixer should only be operated using the safety equipment which is recommended. The mixer should only be operated with complete and undamaged safety equipment.

Maintenance and Repair Work

All work at power equipment should only be carried out by specialists observing the relevant safety requirements.

The machine should be checked daily by the operator for correct operation.

This is especially important for:

movable parts

screw joints

safety equipment

protection equipment

cables, plugs and switches

excessive soiling

In connection with maintenance and repair work the power supply must be disconnected and arrangement made so that it is not possible to engage the mixer again.

>> 3. Special Safety Equipment

Declaration of Conformity

The mixer is in conformity with the provisions in the Council Directive of 14. June 1989 on mutual approximation of the laws of the Member States on the safety of machines (89/392/EEC as amended by Directives 91/368/EEC, 93/44/EEC) with special reference to Annex 1 of the Directive on essential safety and health requirements in relation to the construction and manufacture of machines. The mixer is also produced in accordance with following harmonized standard : EN 292-1, 292-2, 294, 349 and 418

>> 2. Safety and Prevention of Accidents

The mixer will be delivered with either a securely fastened or electrical secured safety cover and with safety screen under the discharge port.

Furthermore, we have for safety reasons installed a thermal relay. The thermal relay protects the electric motor when overheating occurs. The mixer is protected against automatic restarting and the thermal relay needs to be reset before the mixer can be used again.

The rated power is stated on the electric motor machine sign.

>> 5. Starting Procedure

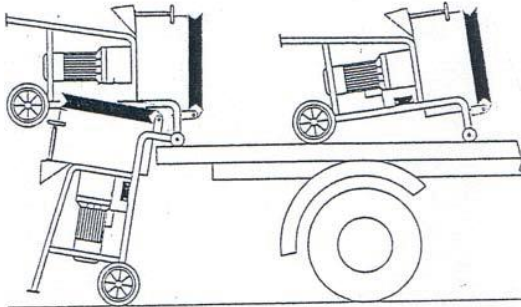


Fig. 1

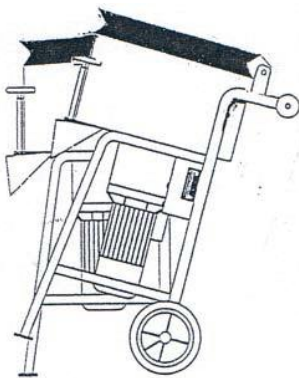


Fig. 2



Fig. 3

When the mixer is transported by means of secured hoists, it must be properly fastened by means of suitable fastening devices so that the transport will be safe.

Fig. 1.

By towing the mixer, please note that max. Permitted speed is 30 km/hour.

Note

Pay attention that there is enough lifting capacity in the hoist being used.

Risk

Incorrect lifting of loads as well as damaged chains and ropes may cause serious accidents.

Manual transport of the mixer.

Fig. 2

The mixer should not be transported by means of cranes or forklifts.

Fig. 3

>> 4. Transport

Before starting the mixer

– please pay attention to following :

1. Check cable for power supply.
Replace if there is any sign of leakage or damaging.
2. Check the mixer and remove all major foreign matters
3. Check that the mixer blades are correctly fastened in order to avoid damage to the mixer.
4. Place the mixer on a surface which is as level as possible.

>> 7. Adjustment of Mixer Blades

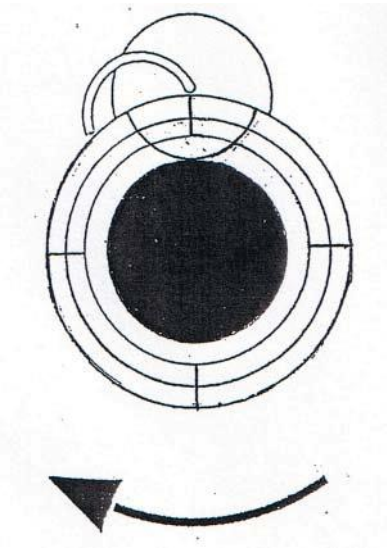


Fig. 2

The mixer is started on the switch as follows:

Green pushbutton = Start

Red pushbutton = Stop

After the engagement the direction of rotation should always be checked.

The mixer blades must rotate clockwise.

Fig. 2.

Where wrong rotation occurs this requires adjustment of two of the three phases. This work must be carried out by a qualified electrician.

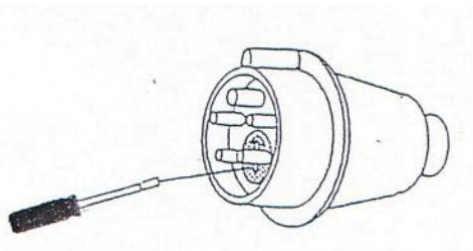


Fig. 3

If the machine is equipped with a directional plug the direction of rotation can be changed by turning the terminals with a screwdriver.

Fig. 3.

Whenever the mixer has been moved to another place, the direction of rotation should be checked.

Filling and discharge of the mixer should only take place when the mixer is running so, hat damage to the mixer is avoided.

>> 6. Using the Mixer

For an optimum adjustment of the mixer blades please follow the instructions below:

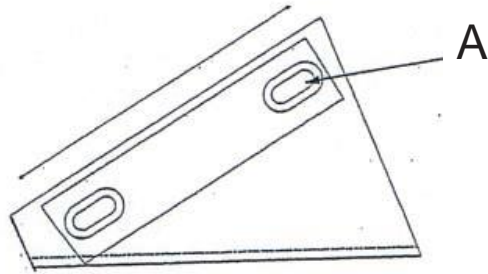


Fig. 4

1. Disconnect the mixer from the power supply and ensure that it is not possible to engage it again.

2. Loosen the screws in the safety cover and remove the cover.

Fig. 4

3. Remove the centre cover A

Fig. 5

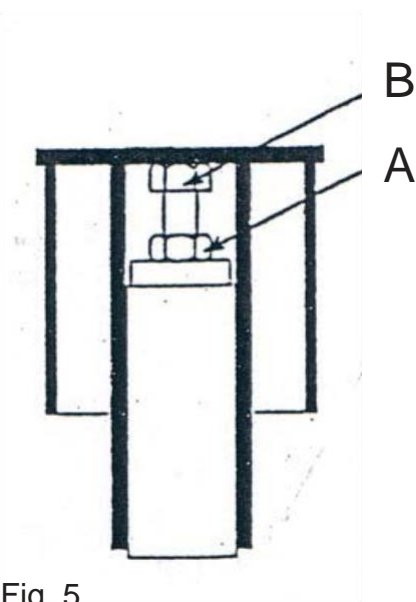


Fig. 5

4. Tighten the screws.


5. Lift the mixing head from the mixing pan

6. Loosen the lock-nut A on bolt B. Fig. 5

7. Turn bolt B clockwise. One rotation lowers the mixing head by approximately 2mm. Install the mixing head and check the distance between the mixer blade and the bottom.

This distance should be approximately 2 mm.

>> 9. Spare Parts

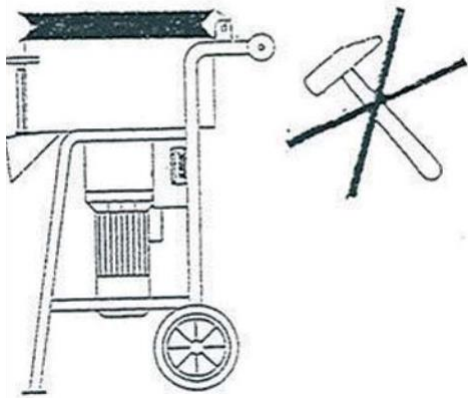

Cleaning Recommendation;

1. Adding of gravel will improve the cleaning effect.
2. Let the mixture run for a few minutes.
3. Empty the mixer.

Disconnect the mixer from the power supply and ensure that it is not possible to engage it again.

4. Clean with water.

Never direct the jet of water directly at the plug or control panel.

The gearbox of the mixer requires no maintenance.
If the mixer pan is damaged it will be difficult to clean it.

Fig. 6

Fig. 6

>> 8. Cleaning and Maintenance of the Mixer

Only approved STARING spare parts should be used for the mixer. The warranty will be void if spurious spare parts are used.

>> 10. Spare Part List

No.	Name	Spare Part No.	Quantity
1	Mixer pan, complet	00905000	1
2	Net cover	00902000	1
3	Stativ	00956000	1
4	Transport wheel	00957001	2
5	Mixer head, complet	00901000	1
6	Mixer paddle, outer steel	00901510	1
7	Mixer paddle, M/l steel	00901520	2
8	Mixer paddle, Yder rubber	00901610	1
9	Mixer paddle, M/l rubber	00901620	2
10	Mixer arm, Y	00901310	1
11	Mixer arm, l	00901330	1
12	Mixer arm, M	00901320	1
13	Mixer arm med skovl, M-O	00901340	1
14	Chute	00905095	1
15	Loading wheel	00907010	2
16	Rubber sleeve		1
17	Transmission shaft	09009010	1
18	Gear	00903012	1
19	El-motor, 1,5kW – 1x220V		1
20	El-motor, 1,5kW – 1x380V		1

>> 12. EC Declaration of Conformity

1. There will be a guarantee of 12 months from date of delivery.
2. The guarantee cover all operational failures due to material or fabrication defects.
3. The manufacturer can choose freely to remedy the damage by compensation, replacement or repair.
4. The costs of dispatch are on the account of the buyer.
5. Replaced parts belong to Staring Maskinfabrik A/S.
6. The manufacturer will undertake no responsibility with regard to consequential damages and possible loss of production.
7. In order for the guarantee to be complied with the defect must be reported immediately after it has occurred.

THE GUARANTEE DOES NOT COVER

1. Damages due to incorrect connection.
2. Repair executed by others.
3. Damage as a result of wrong operation, negligent treatment or transportation damages.
4. Natural wear and tear.
5. Only use approved Staring spare parts.

Where a complaint is forthcoming Staring Maskinfabrik A/S should be informed in writing together with all relevant information regarding the machine. Additionally, an, defective symptoms or cause must be informed.

EC Declaration of Conformity

Manufacturer:

Company Name: Staring Maskinfabrik A/S
Address: Starengvej 9-11
9700 Brønderslev
Danmark

Tel.: +45 98821622

hereby declare that
Machine:

Name: **STARING MASKINFABRIK A/S**
Type: **SM 90**
Serial no.:

- is in conformity with:

the COUNCIL DIRECTIVE of 17 Mai 2006 on mutual approximation of the laws of the Member States on the safety of machines (2006/42/CEEE as amended by directives EN 292-1, EN 292-2, EN 294, EN 418, EN 954-1, EN 1037, EN 10151, EN 60204-1) with special reference to Annex 1 of the Directive on essential safety and health requirements in relation to the construction and manufacture of machines.

Company: STARING MASKINFABRIK A/S
Name: Tommy Bredal
Position: C.E.O.

STARING

Staring Maskinfabrik A/S
Starengvej 9-11
DK-9700 Brønderslev

Tlf.: +45 9882 1622

Fax: +45 9882 5591

www.staring.dk

staring@staring.dk

CVR.nr. DK 2767 2701